

All-car-electrics.com
07976159583

P38 Range Rover Remote Fob Resynchronisation Procedure

If the battery in the fob has gone flat and has been replaced or the vehicle battery has been replaced or other things have rendered the fob unusable it may be necessary to resynch the fob's to the vehicle.

1. Make sure all doors, bonnet and boot are closed.
2. Make sure all exterior door handles are fully closed.
3. Put key in drivers door lock
4. Press and hold the remote lock button
5. Whilst still holding the lock button in turn the key towards the rear of the vehicle.
6. Still holding the lock button in count to 10
7. Still holding the lock button in turn the key to the centre position
8. Still holding the lock button in remove the key from the door lock
9. Release the lock button
10. Try the remote buttons

You have to do this on both remote fobs.